



**Operational
Security
Solutions**


USER GUIDE ALS-TRMR-LE



CONGRATULATIONS ON YOUR PURCHASE OF THE ALS TRMR-LE, the premier reloadable diversionary device and stress inoculation training aid. /

- Your device, as supplied, does not require ATF approval
- Uses the ALS1208 cartridge which has no special storage requirements
- System output of 172 dB with 1.2 PSI overpressure measured at 5 feet
- Utilizes a twist to arm mechanism - no levers or pins to lose or snag
- System can be made safe again by rotating the arming collar back to the safe position
- No-Roll Impact Initiation System, means no waiting for a delay or “cooking off” a fuze
- Engineered to withstand 250 uses
- Safety tested to withstand a 10 ft drop without functioning (in the safe position)
- Can be configured as an irritant powder dispersal system using a .68 ball
- Available in a range of colors to suit different mission profiles

- A. Wobble
- B. Arming Collar
- C. Safety Button
- D. ALS1208
- E. Base
- F. Base O-ring
- G. Firing Pin
- H. Firing Pin Plate
- I. Irritant Ball

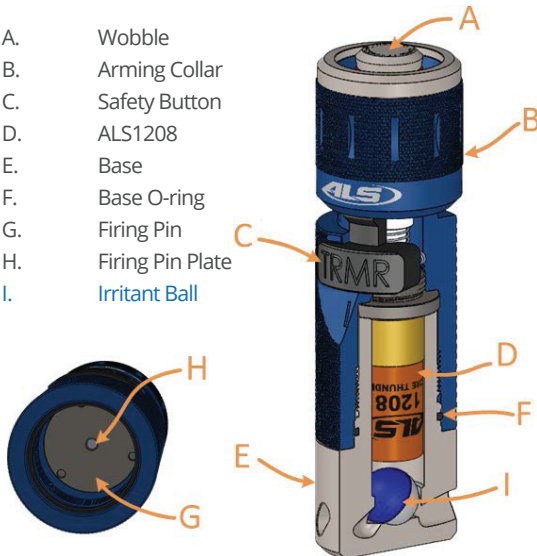

NEVER touch or manipulate the Wobble when the TRMR-LE is loaded, even when the Safety is depressed.

FUNCTION CHECK

- **Ensure that the TRMR-LE is in the SAFE position**
- Remove Base and set aside
- Depress Safety Button and rotate Arming Collar, exposing red band on Wobble
- Release Safety Button
- Place finger over Firing Pin hole in center of Firing Pin Plate
- Push/move Wobble to feel Firing Pin extruding thru hole in the Firing Pin Plate – the Wobble should move freely
- **Rotate the Arming Collar to SAFE position**
- Screw on Base and reassemble the TRMR-LE

RENDER SAFE

- Allow TRMR-LE sit for at least 2 minutes
- Twist to Safe position
- Unscrew the Base
- Remove ALS1208
- Dispose of as you would any 12 gauge round

WARNING - EYE, EAR AND HAND PROTECTION REQUIRED WHILE LOADING OR DEPLOYING THIS DEVICE



